

# BRUNO RESIDENTIAL VERTICAL PLATFORM LIFTS




## Easy access to raised levels, decks and porches

A Bruno VPL provides safe, convenient access for people who use mobility devices. Simple, user-friendly controls, emergency stop switch, and automatic self-lowering exit ramp are just a few of the features that make these units safe, reliable, and easy to operate. Available in models designed for both indoor and outdoor use, multi-level access can be achieved virtually anywhere.

#### Standard Features:

- Weather-resistant controls
- 750 lb/340 kg lifting capacity
- Maximum lifting heights range from 53" to 147", depending on model
- Emergency stop switch on platform push to stop, pull to reset
- Non-skid platform and ramp surfaces
- Integrated safety sensors underneath the platform detect obstructions and stop the unit
- Considerably smaller footprint than wheelchair ramps, making them ideal for garage access into the home
- Gold warranty two years on major components, and one year on parts



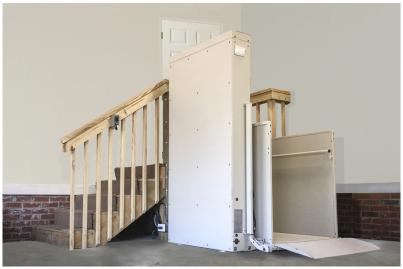



### **BRUNO RESIDENTIAL VERTICAL PLATFORM LIFTS**



SPECIFICATIONS	VPL-3100B & 3200B SERIES
Rated Load	750 lbs.
Drive	Belt driven ball screw/90 VDC 1/3 hp motor with brake Optional 24 VDC battery powered unit
Power	120 VAC 15A grounded circuit
Control Circuit	24 VAC (Low Voltage Controls)
Standard Platform	36 in x 48 in/914 mm x 1219 mm
Footprint	50" x 54" (standard platform) / with ramp 50" x 70"
Speed	AC-powered units: 9 ft/min (0.04 m/s) maximum DC battery-powered units: 10 ft/min (0.05 m/s) maximum
Controls	Constant pressure paddle controller with emergency stop (key switch optional)
Manual Lowering	Optional
Safety Features	Under carriage safety - totally enclosed bottom formed steel safety pan
Warranty	2-year major components 1-year parts

Bruno VPLs have a small footprint and offer a safe, smooth, and quiet ride from one level to another.



1 Year Limited Warranty on New Equipment Installs



#### **Available Options**

- Top landing gate
- Paddle controls
- Cold-weather package (recommended where temps get below 20° F)
- Landing call/send station
- DC battery powered
- Platform gate
- Enclosure

An independently owned and operated franchise business.



Auto Lifts



Pool Lifts

**Commercial** 

Patient Lifts

**Ramps** 



