





Bruno Residential Vertical Platform Lift System

(866) 882-4990

For order convenience please email: vpl.support@bruno.com



Vertical Platform Lift Models



VPL-3153 - Maximum floor to floor 53" (1346 mm)

VPL-3175 - Maximum floor to floor 75" (1905 mm)

VPL-3153B - Battery-powered maximum floor to floor
53" (1346 mm) includes 17AH battery pkg.

VPL-3175B - Battery-powered maximum floor to floor75" (1905 mm) includes 17AH battery pkg.

VPL-3210B - Battery-powered maximum floor to floor 123" (3124 mm) includes 34AH battery pkg.

Standard price includes:

- Keyed, constant pressure controls on platform with emergency stop switch
- Weather protected controls
- Totally enclosed formed-steel bottom safety pan
- 42" (1067 mm) high, solid, side platform walls
- Top & bottom limit switches
- Upper final limit safety switch
- 36" x 48" (914 mm x 1219 mm) non-skid platform
- Automatic self-lowering folding ramp
- Reversible/universal design
- 750 lb (340 kg) lifting capacity
- Power Systems
 - Models VPL-3153 & VPL-3175 1 hp AC motor
 - Models VPL-3153B & VPL-3175B 1/2 hp DC motor (includes 17AH batteries)
 - Model VPL-3210B, 1 hp DC motor (includes 34AH batteries)
- Dual V-belt driven Acme screw with backup safety nut
- Weather resistant powder coated paint throughout; platform and landing gates are also e-coated for maximum protection
- Also standard on model VPL-3210B
 - Split tower system
 - Emergency lowering system
- Non-skid surface on platform and ramp
- Bruno's Gold Warranty Two years on major components and one year on parts





Platform Options


Platform gate (recommended for all unenclosed applications)

Platform gate operator (includes timer assembly)

- Straight through platform 36" X 48" (914 mm X 1219 mm) (standard)
- Straight through platform 36 "X 54" (914 mm X 1372 mm)
- Straight through platform 36" X 60" (914 mm X 1524 mm)
- Straight through platform 42" X 60" (1067 mm X 1524 mm)
- 90°/Adjacent platform 36" x 48" (914 mm X 1219 mm) long
- *90°/Adjacent platform 36" x 54" (914 mm X 1372 mm) long
- *90°/Adjacent platform 36" x 60" (914 mm X 1524 mm) long
- *90°/Adjacent platform 42" x 60" (1067 mm X 1524 mm) long




Platform gate

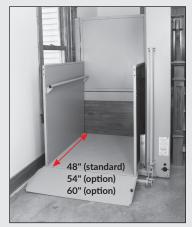

Standard platform



Platform gate operator

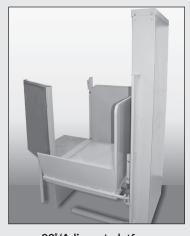

90°/Adjacent platform

^{*54&}quot; or 60" platform recommended for 90°/adjacent platform applications.

Platform Control Options

- Rocker switch control with emergency stop (standard)
- Paddle control with emergency stop
- Rocker switch control with emergency stop and audio/visual alarm
- Paddle control with emergency stop and audio/visual alarm




Rocker switch w/ emergency stop & audio/visual alarm



Paddle Control w/ Emergency Stop

Landing Control Options

- Landing call/send Surface mount with rocker switch control
- Landing call/send Surface mount with paddle control

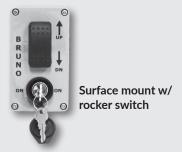




Upper Landing Gate & Interlock Options

- Top landing gate with rocker switch control with EMI or ESI Interlock.
- Top landing gate with paddle control with EMI or ESI Interlock.

Standard: 36" (914 mm) inside opening

Optional: 42" (1067 mm) inside opening (recommended with 90° platform)

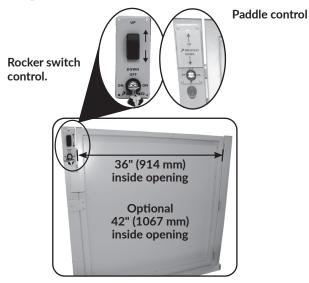

Gate with rocker switch or paddle controls.

Upper Landing Gate & Interlock Options

 Door/Gate Operator (can be fitted to most doors and gates for power-assisted operation.)



Door/Gate Operator

Electro Mechanical Interlock

(gate or door not provided by Bruno)

• Not for use in lower landing door applications

"GAL" Electro Mechanical Interlock (gate not provided by Bruno)

• Not for use in lower landing door applications

Interlock wiring kit (interlock & gate not provided by Bruno)

Interlock timers

• Used for dealer supplied interlock

Note: Please check local codes for interlock requirements



Electro mechanical interlock (gate or door not provided by Bruno)



Electrical mechanical "GAL" interlock (gate or door not provided by Bruno)

Other Options

- Tool for manual lowering device
- Cold weather package (recommended if operating temperature is below 20°F/-7°C;)
- 34AH Battery package upgrade (battery-powered units ONLY)
- Pit switch (Model VPL-3210B ONLY)
- Flood Sensor Kit
- Flood zone tower (Model VPL-3210B ONLY)





Bruno Residential Vertical Platform Lift System

LIMITED WARRANTY: VERTICAL PLATFORM LIFT

Any product sold by Bruno Independent Living Aids, Inc., ("Bruno") is subject to the Bruno limited warranty which applies to the specific product(s) being purchased. All Bruno warranties cover defects in materials and workmanship for a limited time and do not cover damage or failure caused by misuse, abuse, accidents, physical damage, modifications not made by Bruno, damage in shipment, or repairs undertaken by anyone other than Bruno factory employees or authorized distributors. All Bruno warranties are limited to the repair, replacement or refund of the purchase price and certain types of damages are not covered. Before you purchase a bruno product, you should review the applicable product warranty for the product you wish to purchase. Copies of warranties are available upon request from Bruno or its authorized distributors.

(866)882-4990

For order convenience please email at: vpl.support@bruno.com



All information is subject to change without notice. This reference guide supersedes all previous reference guide distributed by Bruno Independent Living Aids, Inc.® All illustrations, descriptions and specifications in this guide are based on the latest product information at the time of publication. Bruno Independent Living Aids, Inc., reserves the right to make changes at any time without notice. © 2021 Bruno Independent Living Aids, Inc.® 2021-11-09 RES VPL Lift Reference Guide